

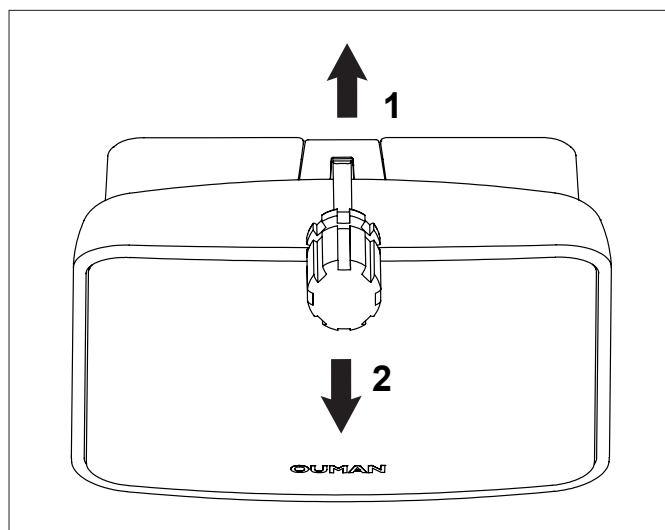
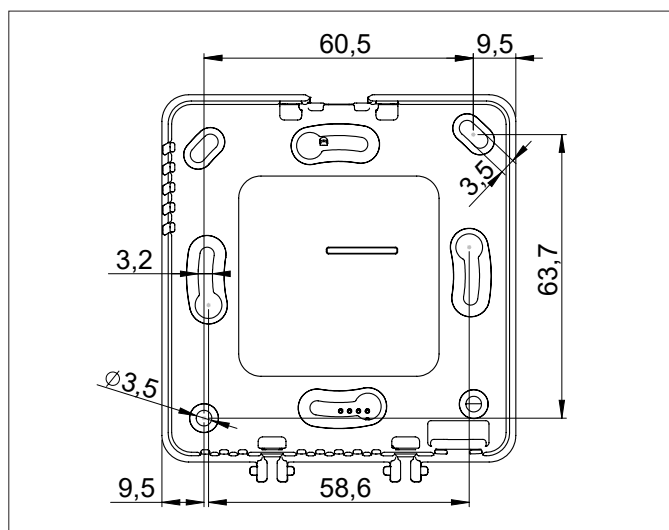


Temperature- and humidity sensor Installation sheet

OMA0579

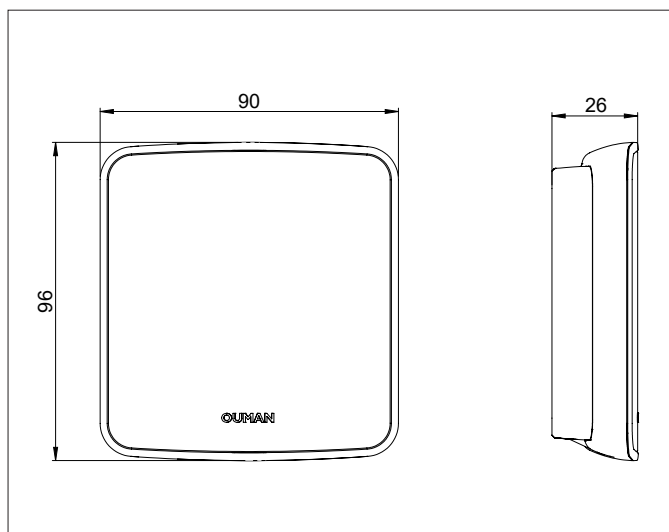

To the junction box

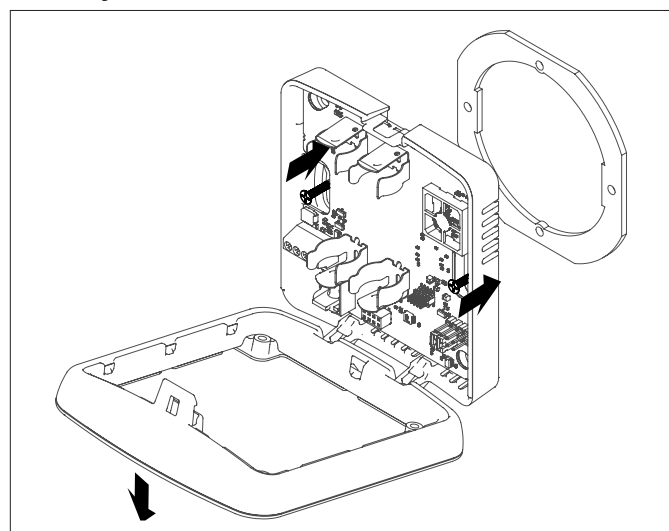

To the wall

