
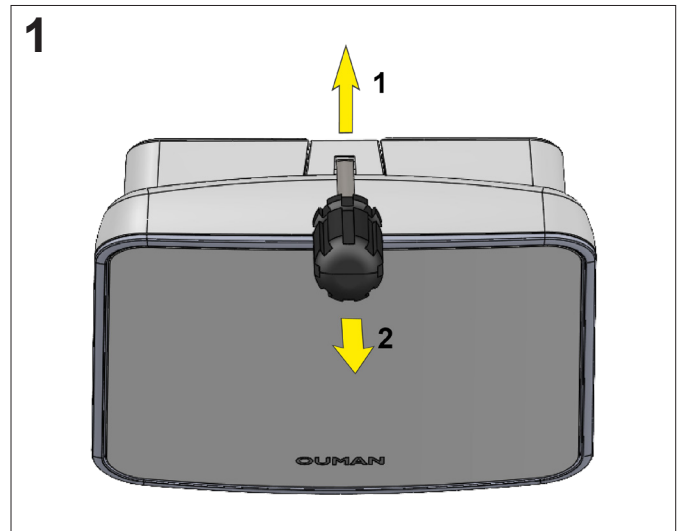


Temperature- and humidity sensor with external 1.8m measure element


Installation and connection instructions

OMA0583

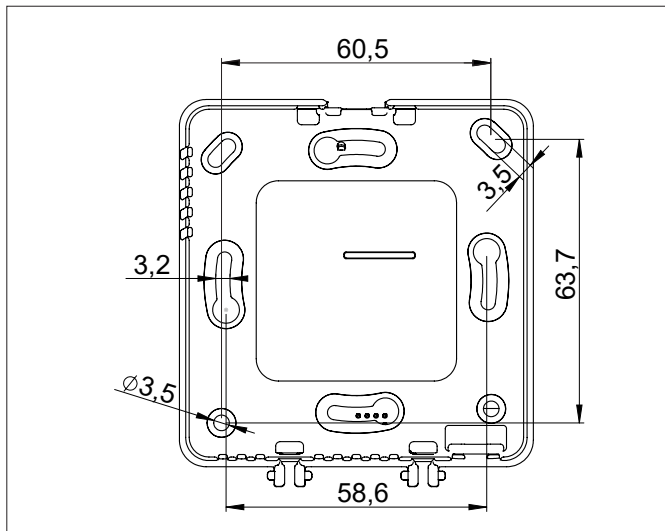


To the junction box

2a

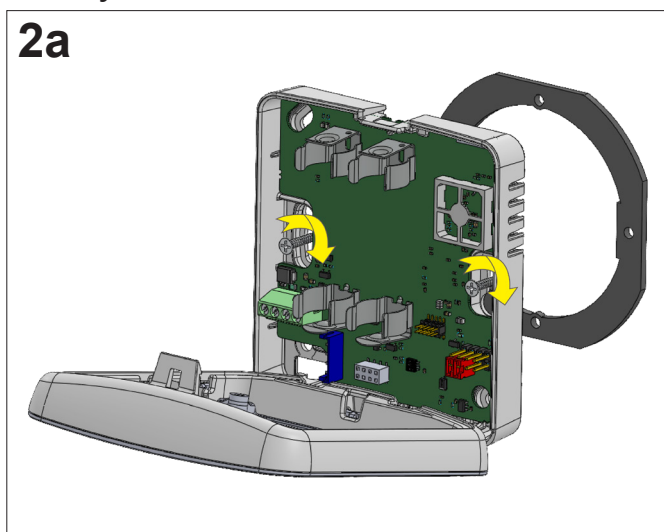


To the wall

2b

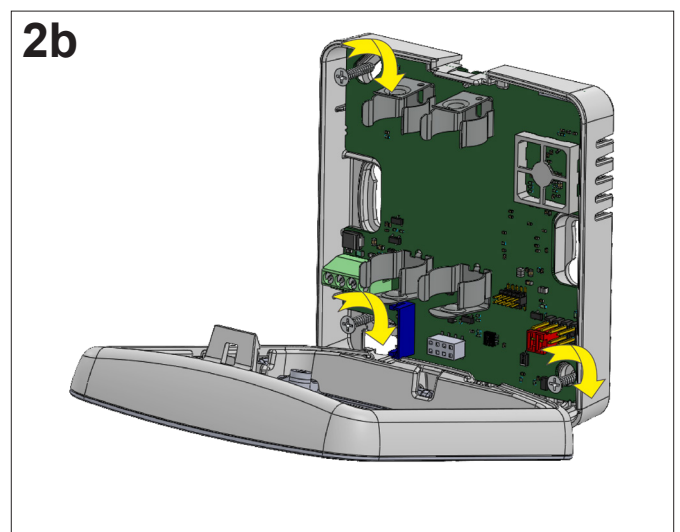

AUX connection

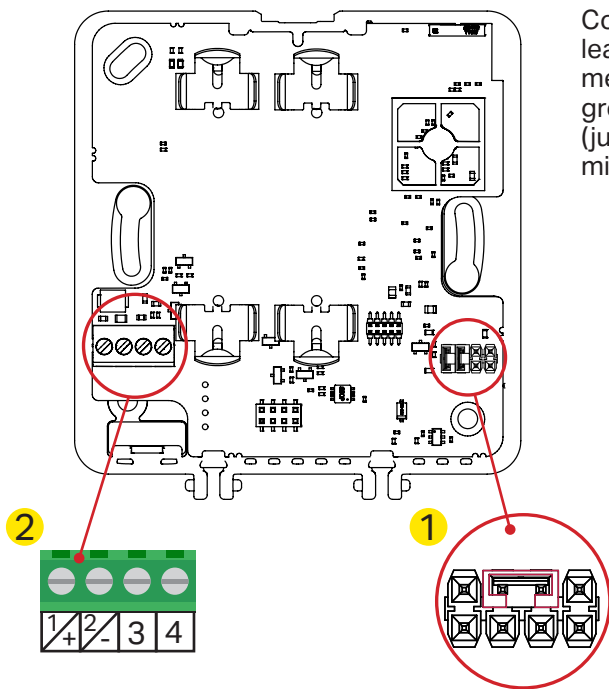

Connect temperature measurement, digital input or water leak detector in terminal strips 3 and 4. **2** For the transmitter measurement connect terminal strips 3 and 4 (power source's ground \perp) **2** and **1** remove the battery-side short-circuit (jumper) and turn the other short-circuit from upright to two middle pins in horizontal position on sensor circuit board.